

## DVD Recording in 180/184

 
1. [Turn on Rack](#)
2. [Set up cameras](#)
3. [Select drive and choose recording speed](#)
4. [Record your program to the hard drive or direct to DVD](#)
  - a. Record
  - b. Edit, title, and assign thumbnails to your recording if desired
  - c. High speed dub to a DVD-R for back up if recording to a hard drive
5. [Finalize to complete for viewing](#)
6. [Room 184 Staging Configuration](#)

### 1. Turn on Rack

Turn on the switch on the bottom of the rack. **Wait for a couple of minutes for everything to fully initialize.** When powering down, turn this switch off—do not turn off the components individually!

### 2. Set up cameras

To select a camera, press **1** or **2** on the camera controller and then press the **CAM/SET** button.

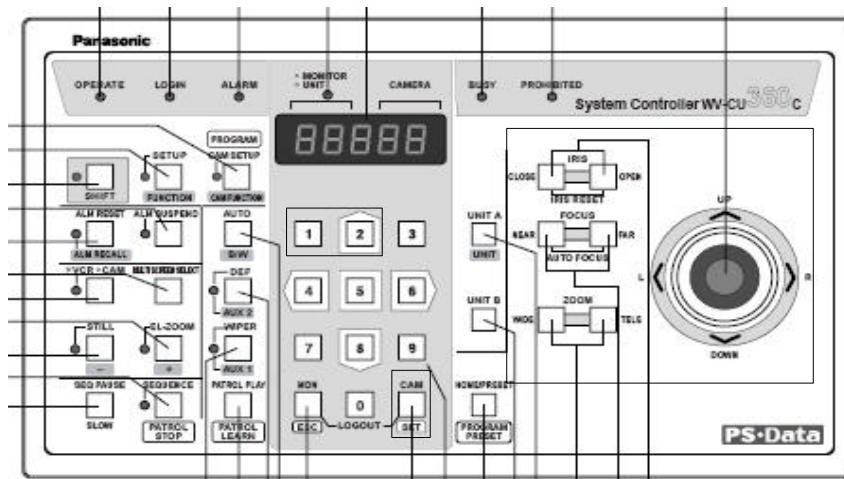

Then use the **IRIS**, **FOCUS**, **ZOOM** and **JOYSTICK** to frame your subject.

## Regarding PIP:

Reminder:

When the **Invert** button is **ON**, the big picture or only picture displayed on the monitor is camera **2**.

 
When the **Invert** button is **OFF**, the big picture or only picture displayed on the monitor is camera **1**.

### 3. Select drive and choose recording speed


- Use the remote or the unit's buttons to select the hard drive (HDD) or DVD to record to (yellow highlights).
- Choose the recording mode (speed) using the **REC MODE** button on the remote.

Mode	HDD (160 GB)	DVD-RAM		DVD-R (4.7 GB)
		Single-sided (4.7 GB)	Double-sided (9.4 GB)	
XP (High quality)	36	1	2	1
SP (Normal)	70	2	4	2
LP (Long play)	138	4	8	4
EP (Extra long play)	284 (212*)	8 (6*)	16 (12*)	8 (6*)

## Remote control

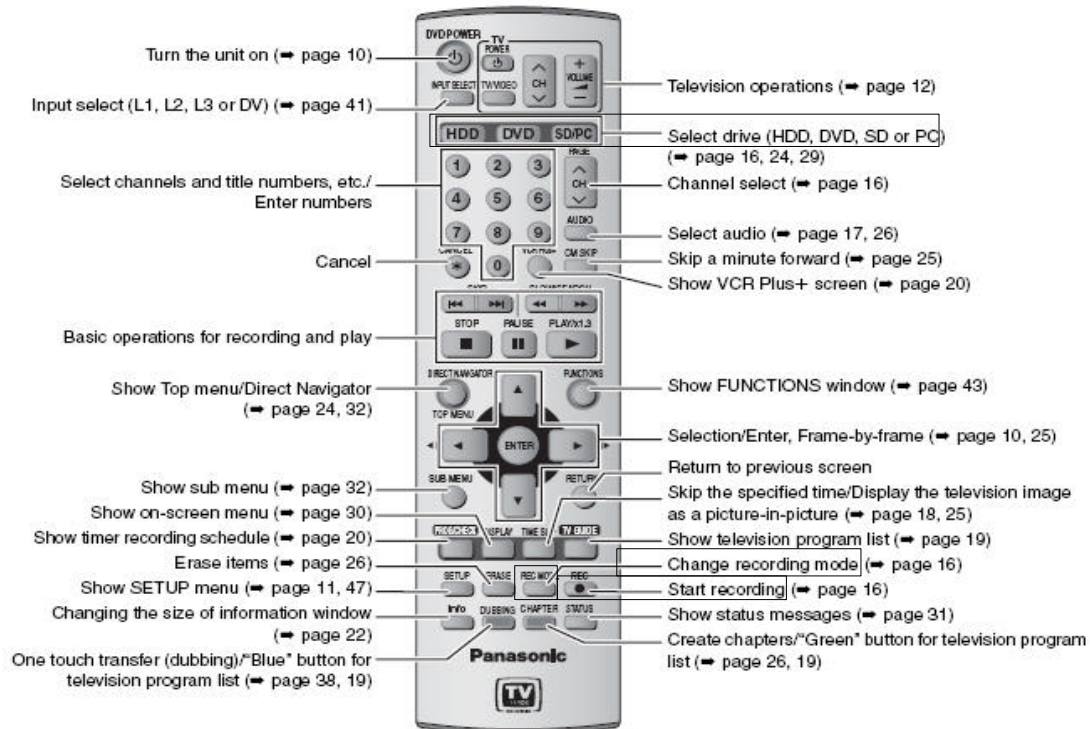

## Main unit

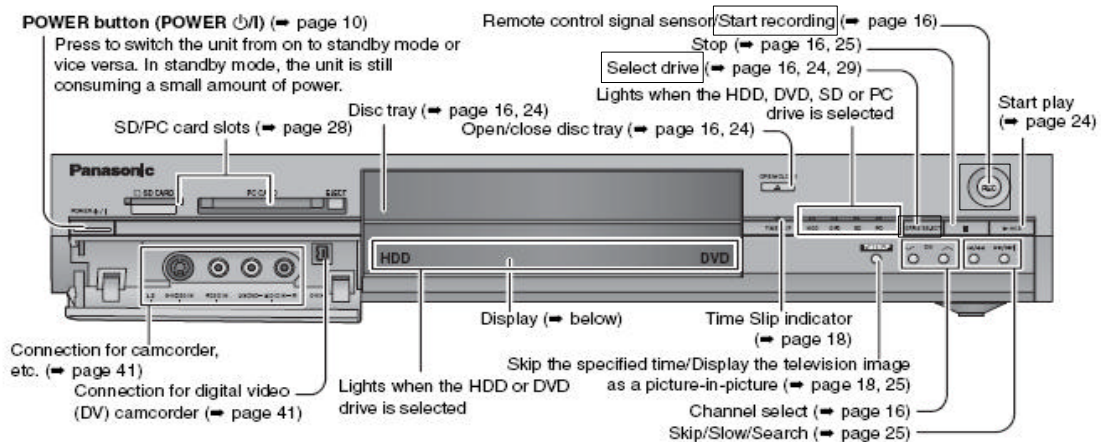 


## 4. Record your program to the hard drive or direct to DVD

- a.** Press the **RECORD** button on the unit or remote. Once finished, you can
- b.** Edit, title and assign thumbnails to your recording if desired.

- i. To **title thumbnails**:

 
- 1 Press [DIRECT NAVIGATOR].
- 2 **HDD RAM**  
Press [▲, ▼, ◀, ▶] to select “VIDEO” tab and press [ENTER].
- 3 Press [▲, ▼, ◀, ▶] to select the title.

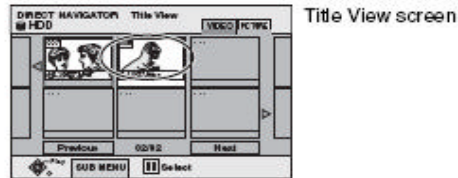

**To show other pages**  
Press [▲, ▼, ◀, ▶] to select “Previous” or “Next” and press [ENTER].  
• You can also press [◀◀, ▶▶] to show other pages.

**Multiple editing**  
Select with [▲, ▼, ◀, ▶] and press [II]. (Repeat)  
A check mark appears. Press [II] again to cancel.

 - 4 Press [SUB MENU], then [▲, ▼] to select the operation and press [ENTER].  
• If you select “Edit”, press [▲, ▼] to select the operation and press [ENTER].

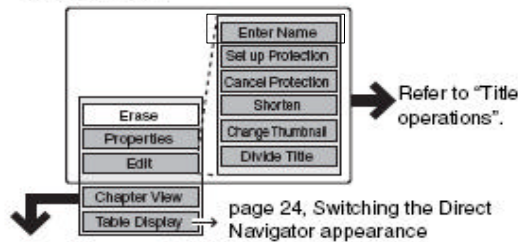

**C. High speed dub to a DVD-R for backup**

- 1 While stopped  
Press [FUNCTIONS].
- 2 Press [▲, ▼, ◀, ▶] to select  
“DUBBING” and press [ENTER].



- If you are not going to change the registered list press [▼] several times (= step 7).

 
- 3 Press [▲, ▼] to select “Dubbing direction” and press [▶].
  - ① Press [▲, ▼] to select “Source” and press [ENTER].
  - ② Press [▲, ▼] to select the drive and press [ENTER].
  - ③ Press [▲, ▼] to select “Destination” and press [ENTER].

The same drive as the transfer (dubbing) source cannot be selected.


  - ④ Press [▲, ▼] to select the drive and press [ENTER].
  - ⑤ Press [◀] to confirm.
- 4 Press [▲, ▼] to select “Mode” and press [▶].
  - ① Press [▲, ▼] to select “Format” and press [ENTER].
  - ② Press [▲, ▼] to select “Video” and press [ENTER].
  - ③ Press [▲, ▼] to select “Recording mode” and press [ENTER].
  - ④ Press [▲, ▼] to select the mode and press [ENTER].
  - ⑤ Press [◀] to confirm.
- 5 Press [▲, ▼] to select “Create list” and press [▶].

Select the transferring (dubbing) items and register on the list.

- When transferring (dubbing) to DVD-R using high speed mode, only items indicated with “▶▶▶” can be registered.

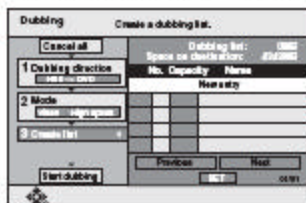

 
- ① Press [▲, ▼] to select “New entry” and press [ENTER].
- ② Press [▲, ▼, ◀, ▶] to select “Video” or “Play List” tab and press [ENTER].

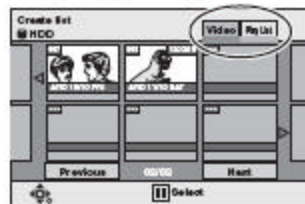

- ③ Press [▲, ▼, ◀, ▶] to select the titles or play lists and press [ENTER].
  - To select a multiple number of items together, press [■] to add the check mark and press [ENTER] (⇒ below, Multiple editing).
  - To show other pages (⇒ below)
  - To edit the transferring (dubbing) list (⇒ below)
- 6** Press [▲, ▼] to select “SET” and press [ENTER].  
The transferring (dubbing) list is registered.
- 7** Press [▲, ▼] to select “Start dubbing” and press [ENTER].  
Press [◀, ▶] to select “Yes” and press [ENTER] to start transferring (dubbing).

## 5. Finalize to complete for viewing

- 1** While stopped  
Press [FUNCTIONS].
  - 2** Press [▲, ▼, ◀, ▶] to select “DISC SETTING” and press [ENTER].
  - 3** Press [▲, ▼] to select “TOP MENU” and press [ENTER].  
Press [▲, ▼, ◀, ▶] to select the background and press [ENTER].  
You can select the background that will be displayed as the DVD-Video top menu after finalizing.
    - You can change thumbnails displayed in the top menu. (⇒ page 33, Change Thumbnail)
- TOP MENU LIST

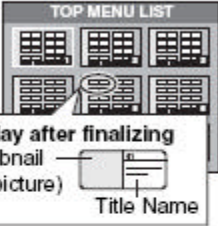
- 4** Press [▲, ▼] to select “Select First play” and press [ENTER].  
Press [▲, ▼] to select “Top Menu” or “Title 1” and press [ENTER].  
You can select whether to show the top menu after finalizing.  
Top Menu: The top menu appears first  
Title 1: The disc content is played without displaying the top menu.
  - 5** Press [▲, ▼] to select “Finalize” and press [ENTER].
    - ① Press [◀, ▶] to select “Yes” and press [ENTER].
    - ② Press [◀, ▶] to select “Start” and press [ENTER].  
A message appears when finalizing is finished.
    - ③ Press [ENTER].



**NOTE:** You can also title your disk before finalizing:

- 1** While stopped  
Press [FUNCTIONS].
- 2** Press [▲, ▼, ◀, ▶] to select “DISC SETTING” and press [ENTER].
- 3** Press [▲, ▼] to select “Disc Name” and press [ENTER].
  - ➔ page 46, Entering text
  - The disc name is displayed in the FUNCTIONS window.
  - With a finalized DVD-R, the name is displayed on the Top Menu.



## 6. Room 184 Staging Configuration

Using these room configurations will allow the cameras an unobstructed view of the client and materials.

